


# FINLEY ALL IN ONE SHOWER SET INSTALLATION MANUAL


## BEFORE YOU START

- Cut off the water supply pipeline. (Recommended minimum working pressure 0.2Mpa - 2bar)
- Check if the water supply pipe is damaged, if necessary, replace
- Prepare the G1/2 pipes and accessories.
- The shower head works at maximum working pressure: 0.5Mpa (5bar). If the water pressure is higher than 0.5Mpa(5bar) you must install a pressure reducing valve. Shower head is made to highest working temperature and environmental temperature: 60°C.
- Keep shower head and pipe away from the heater.


- 1** Install the valve accessories and the wall seat

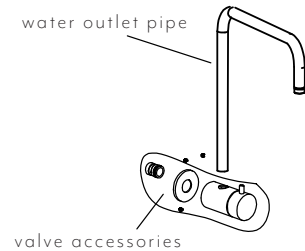


- 2** Put the straight arm into the holder, valve accessories and wall seat, use M5 screws. Install the water outlet pipe into the top.

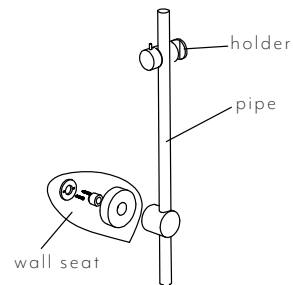

- 3** Before installing shower head, open and clean the pipe. Put the flow rate limiter and gasket into the shower head, then connect the shower head with the water outlet. Screw the head.

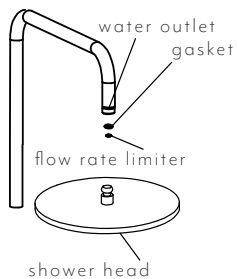

- 4** Before installing the hand shower, open and clean the pipe. Connect hand shower with the hose and the pipe

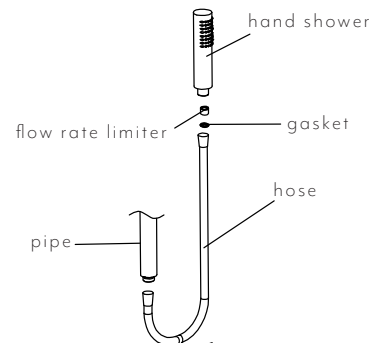

- 5** Make sure each screw connection is strong. Open the drainage system and water supply, check if there's any leakage in the connections.

