


# FINLEY ALL-IN-ONE SHOWER SET

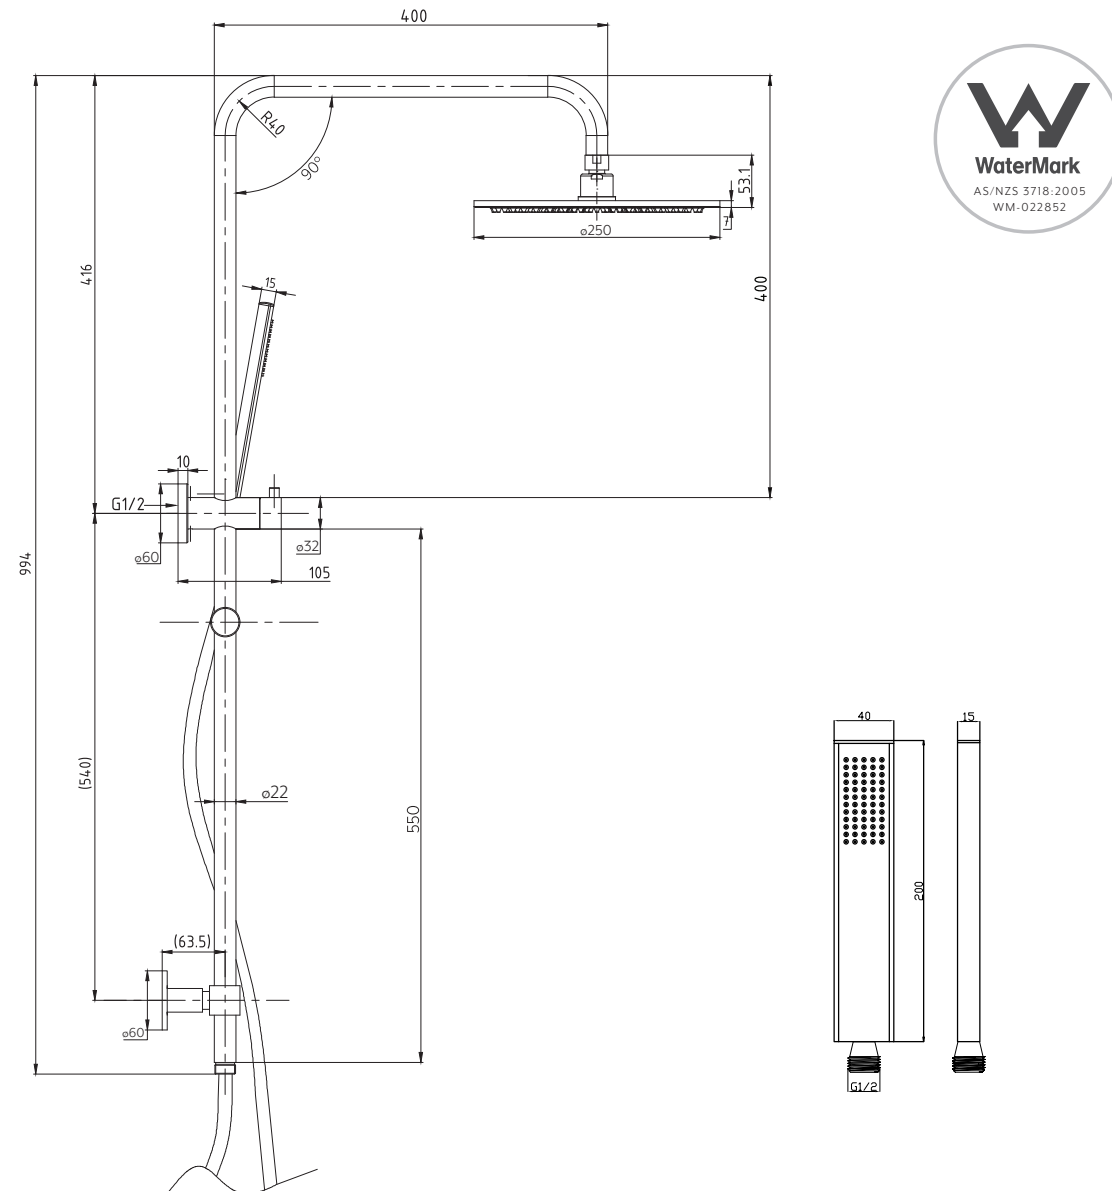

## SPECIFICATIONS

## RECOMMENDED USE

Domestic

## COLOUR AVAILABILITY



## PRESSURE RATING

Recommended minimum working pressure 150kPa  
Recommended maximum working pressure 500kPa  
Hot and cold water inlet pressure should be equal

### TEMPERATURE RATING

Maximum continuous working temperature 75°C  
If the water temperature exceeds 75°C, an approved tempering valve must be fitted

## WARRANTY

Shower Head / Hand Shower  
Structure: 10 years | Finish: 5 years

Shower Rail / Shower Hose / Diverter  
Structure: 5 years | Finish: 2 years


# FINLEY ALL IN ONE SHOWER SET INSTALLATION MANUAL

## BEFORE YOU START

- Cut off the water supply pipeline. (Recommended minimum working pressure 0.2Mpa - 2bar)
- Check if the water supply pipe is damaged, if necessary, replace
- Prepare the G1/2 pipes and accessories.
- The shower head works at maximum working pressure: 0.5Mpa (5bar). If the water pressure is higher than 0.5Mpa(5bar) you must install a pressure reducing valve. Shower head is made to highest working temperature and environmental temperature: 60°C.
- Keep shower head and pipe away from the heater.


1

Install the valve accessories and the wall seat

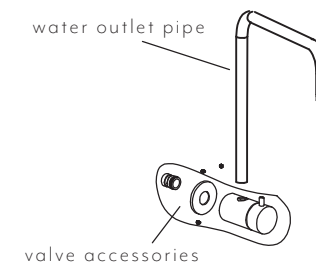


2

Put the straight arm into the holder,  
value accessories and wall seat, use M5 screws.  
Install the water outlet pipe into the top.

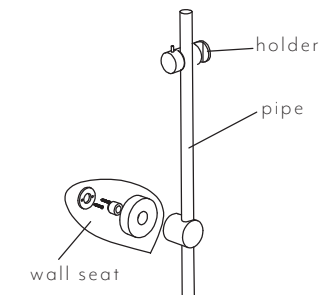


3

Before installing shower head, open and clean the pipe. Put the flow rate limiter and gasket into the shower head, then connect the shower head with the water outlet. Screw the head.

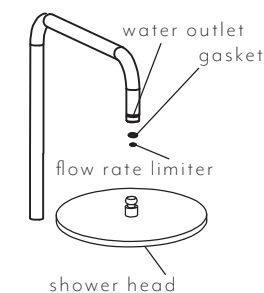

4

Before installing the hand shower, open and clean the pipe. Connect hand shower with the hose and the pipe

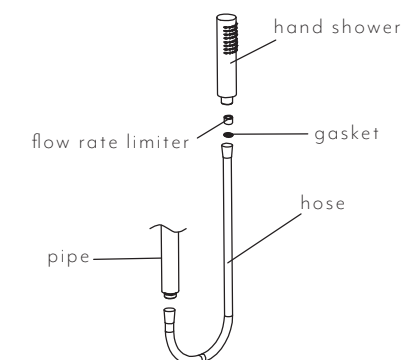

5

Make sure each screw connection is strong. Open the drainage system and water supply, check if theres any leakage in the connections.