

**Note:** Dimensions are nominal measurements only


SPECIFICATIONS	
RECOMMENDED USE	Domestic/Commercial
MATERIAL	Stainless Steel
OUTLET SIZE	Suitable for 80mm PVC Pipe
WARRANTY	Structure: 5 years   Finish: 2 years



Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

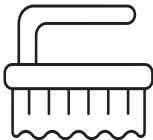

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material


Disclaimer: Products in this specification manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors. All ABI Products are designed in Australia. Copyright ABI Interiors Pty Ltd 2021.

## INSTALLATION GUIDE

Note: This product must be installed by a licensed tradesperson. This is a general installation guide - there are many factors that are involved that can alter the installation method.


- 1 Note: The same installation principle applies to either a concrete or timber floor construction.

Allow a recess in the floor at pipe location to accomodate puddle flange, which is glued & screwed into position.

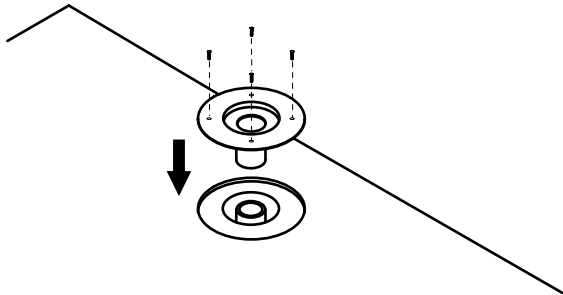


- 3 Adjust the top of the puddle flange to the finished height required for the shower grate installation.

Note: Remove puddle flange decal prior to showergrate installation.

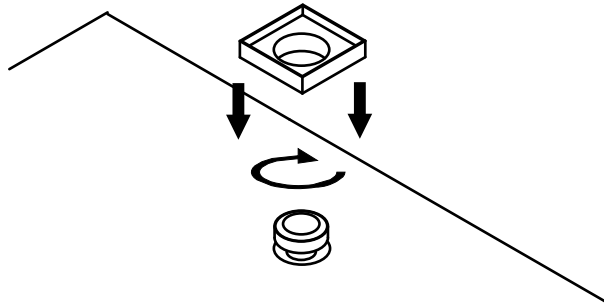


- 5 The remainder of the sand cement is installed to allow for correct falls down to the drain.

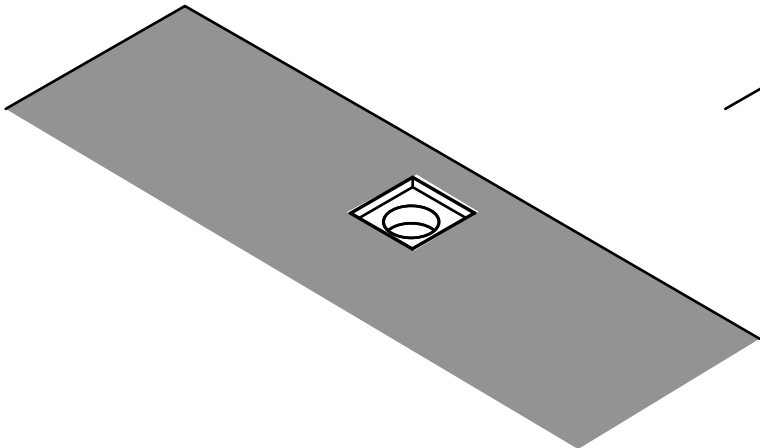


- 2 After walls & floors are lined & stopjoints are installed, the waterproofing can be applied both on to and in to the puddle flange.

Once waterproofing has adequately set, screw the puddle flange center back into place.

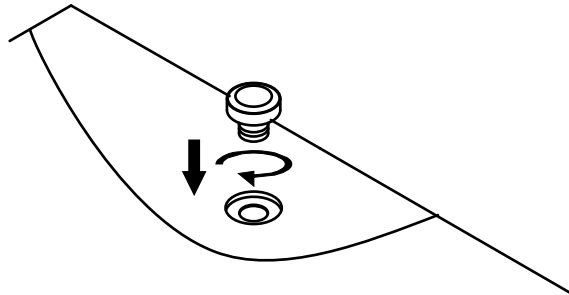

- 4 Bedding is applied around & underneath the grate. Level around the perimeter of the grate with any excess bedding being scraped away to allow for tile and glue thickness, so the finished tile height is just above the finished height of the shower grate

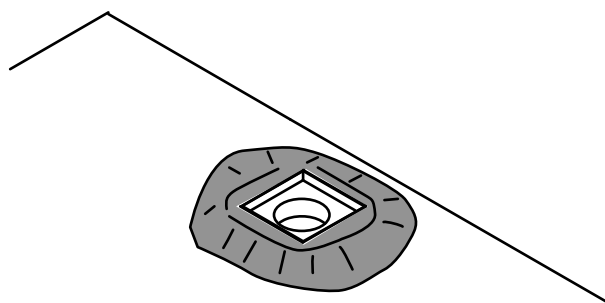

- 6 Lay tiles and fix top of shower grate into base.

