


## VAADA HAND TOWEL RAIL



## VAADA HAND TOWEL RAIL

## INSTALLATION MANUAL

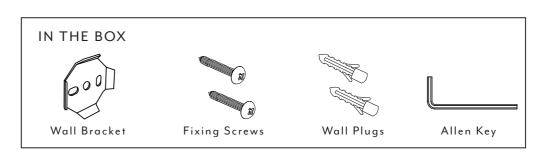


STEP ONE: Drill holes in desired position and insert wall plugs

STEP TWO: Remove brackets from the Hand Towel Holder using the allen key to loosen the grub screw. Install brackets by fastening the supplied screws into the wall plugs

STEP THREE: Place the Hand Towel Holder onto the bracket and firmly tighten grub screw using allen key

IMPORTANT - If installing onto plasterboard please use appropiate fixings

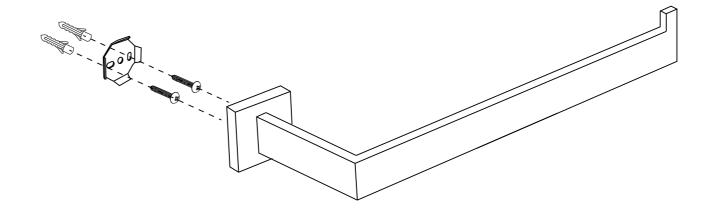








DO NOT use cream cleaners or bleach. These substances are abrasive



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material



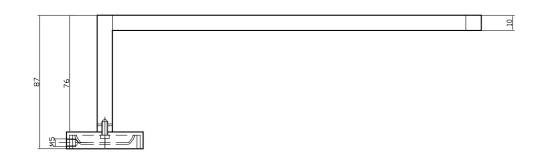

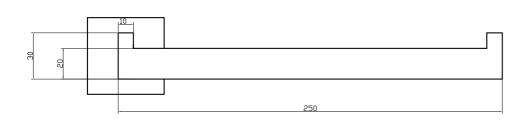

SPECIFICATIONS	
RECOMMENDED USE	Domestic
COLOUR AVAILIBILITY	
MATERIAL	Stainless Steel
FINISH	PVD
WARRANTY	Structure: 10 years   Finish: 5 years

Disclaimer: Products in this specification manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors. All ABI Products are designed in Australia. Copyright ABI Interiors 2019. WWW.ABIINTERIORS.COM.AU